

INSTRUCTIONS FOR THE USE OF THE TELESKIP

This Teleskip should only be operated by a suitably trained operator wearing the appropriate P.P.E. Equipment (i.e. helmet, goggles, gloves and protective footwear).

Always ensure that the forklift being used is of sufficient capacity to lift the loaded skip.

The skip should be visually inspected prior to commencing work to ensure it is free from defects or damage and is safe to use.

The forks must be driven into the pockets as far as they can go to ensure the auto-lock engages behind the fork heels.



The operator should visibly check the auto-lock is engaged before transporting or tipping the **TELESKIP**.

When the **TELESKIP** is lowered to the ground the auto-lock will disengage and the forks can be reversed out.



WARNING

DO NOT TRAVEL WITH THE SKIP IN TIPPED POSITION
DO NOT OPERATE OVER PERSONNEL
EMPTY AT A SAFE DISTANCE FROM PERSONNEL
DO NOT OVERLOAD
DO NOT RIDE IN THE HOPPER
DO NOT USE IF FAULTY OR DAMAGED

MAINTENANCE

The **TELESKIP** should be examined prior to use to ensure it is in good working order and free from defects and damage.

Particular attention should be given to the auto-lock system. The hinges should be regularly lubricated with maintenance spray to ensure free operation. The gas struts should be examined on a daily basis to ensure they are not damaged and retain adequate compression.